

Thermo Scientific Orion Star A123

Basic dissolved oxygen portable meter

Thermo Scientific™ Orion™ Star A123 Dissolved Oxygen Portable Meters make it easy and affordable to take simple, accurate dissolved oxygen measurements.




Thermo Scientific Orion Star A123 Dissolved Oxygen Portable Meters combine simplicity with accuracy. A large LCD displays dissolved oxygen readings along with temperature. Icons provide quick updates on battery life and reading stability. Simple button layout and onscreen messages help with calibration and setup menu choices.

Features and Benefits

- Large, informative screen clearly shows the main information, including DO reading in mg/L or % saturation, temperature in °C or °F, meter mode and battery life
- Automatic temperature, manual salinity input and manual barometric pressure compensation for accurate DO results
- Don't miss a reading—AUTO-READ™ locks in the stable reading on your screen and ready indicator alerts when continuous readings are stable

- Two calibration options to meet your procedural requirements: water-saturated air method or custom value using a Winkler titration
- Accepts Thermo Scientific Orion polarographic dissolved oxygen probes
- Non-volatile memory holds up to 50 data points
- Four AA batteries (included) provide over 2000 hours of operation or purchase the universal power adapter (sold separately)
- Perfectly portable, waterproof and protected to take anywhere with a IP67-rated housing
- 3 year meter replacement warranty

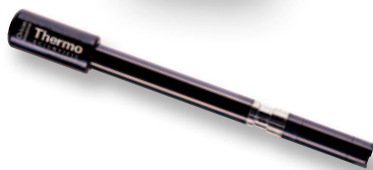

Thermo
SCIENTIFIC


Thermo Scientific Orion Star A123 Dissolved Oxygen Portable Meter

Specifications	
Dissolved Oxygen	Concentration Range: 0 to 20 mg/L Resolution: 0.01, 0.1 mg/L Relative Accuracy: ±0.2 mg/L
	% Saturation Range: 0 to 200 % saturation Resolution: 0.1, 1 % saturation Relative Accuracy: ±2 % saturation
	Manual Barometric Pressure Correction: 450.0 to 850.0 mm Hg
	Manual Salinity Factor Correction: 0 to 45
	Calibration Features: Water-saturated air, manual (Winkler)
	Sensor Type: Polarographic
	Temperature Range: 0 to 50 °C, 32 to 122 °F Resolution: 0.1 °C, 0.1 °F Relative Accuracy: ±0.1 °C, ±0.1 °F Temperature Offset Calibration: Yes
	Datalogging Number of Points: 50 Log Function: Manual, Automatic with AUTO-READ
	Inputs DO Probe with Built-in Temperature: 9-pin mini-DIN
	Power AC Adapter: Optional—universal, 100-240 VAC Battery Power: Included—4 AAs Battery Life: 2000 hrs

Meter Ordering Information	
Part No.	Description
STARA1230	Orion Star A123 Dissolved Oxygen Portable Meter - Four AA batteries (installed) - Printed quick start guide and literature CD
STARA1235	Orion Star A123 Dissolved Oxygen Portable Meter Kit - 083005MD Orion polarographic DO probe - 080017 calibration sleeve for DO probe - 080513 DO probe maintenance kit - Protective armor with electrode holder - Hard-sided field case - Four AA batteries (installed) - Printed quick start guide and literature CD

Accessories Ordering Information	
Part No.	Description
STARA-CS	Orion Star A series portable meter hard-sided field case
1210005	Orion Star A series portable meter soft-sided field case
STARA-AR	Orion Star A series portable meter armor with pH electrode holder, conductivity and DO probe holder, stand and adjustable hand-strap
STARA-ESCD	Orion conductivity and DO probe holder for portable Star A series meter armor
083005MD	Orion polarographic DO probe, 1.5 m cable
083010MD	Orion polarographic DO probe, 3 m cable
080513	Orion polarographic DO probe maintenance kit
080017	Calibration sleeve for Orion polarographic DO probes
1010003	Universal power adapter, 100-240 V, 50/60 Hz

For more information, contact your local Thermo Scientific products dealer or call our customer and technical service experts at 1-800-225-1480 (for the US and Canada) or visit www.thermoscientific.com/water.

 **Thermo Fisher Scientific**
Water Analysis Instruments
Chelmsford, MA USA
Quality Management System
Registered to ISO 9001

thermoscientific.com/water

© 2013 Thermo Fisher Scientific Inc. All rights reserved. Certified System StandardsMark logo is a trademark of SAI Global. All other trademarks are the property of Thermo Fisher Scientific Inc. & its subsidiaries



Water Analysis Instruments

North America
Toll Free: 1-800-225-1480
Tel: 1-978-232-6000
info.water@thermo.com

Netherlands
Tel: (31) 020-4936270
info.water.uk@thermo.com

China
Tel: (86) 21-68654588
wai.asia@thermofisher.com

India
Tel: (91) 22-4157-8800
wai.asia@thermofisher.com

Singapore
Tel: (65) 6778-6876
wai.asia@thermofisher.com

Japan
Tel: (81) 045-453-9175
wai.asia@thermofisher.com

Australia
Tel: (613) 9757-4300
in Australia (1300) 735-295
InfoWaterAU@thermofisher.com

Thermo
SCIENTIFIC

Part of Thermo Fisher Scientific

